


DCD SKEWER
version 1.0p
Assembly instructions





Assembly

Step
1
Muzzle

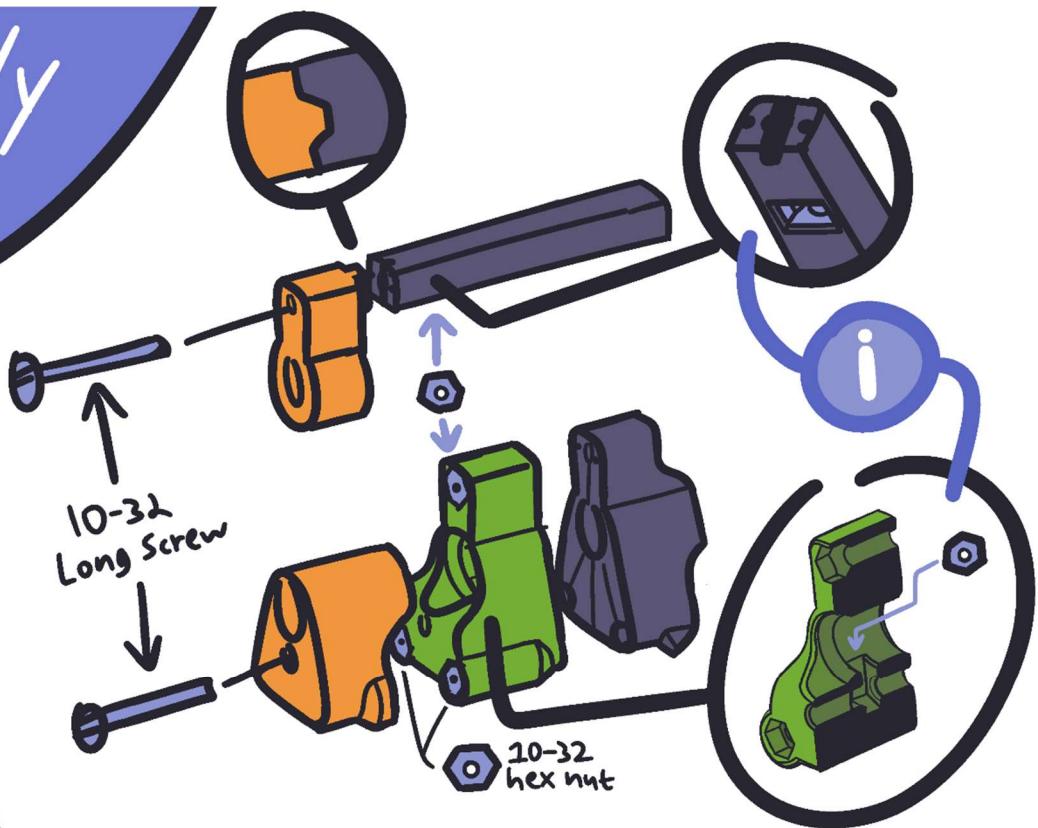

Step 2 Magwell

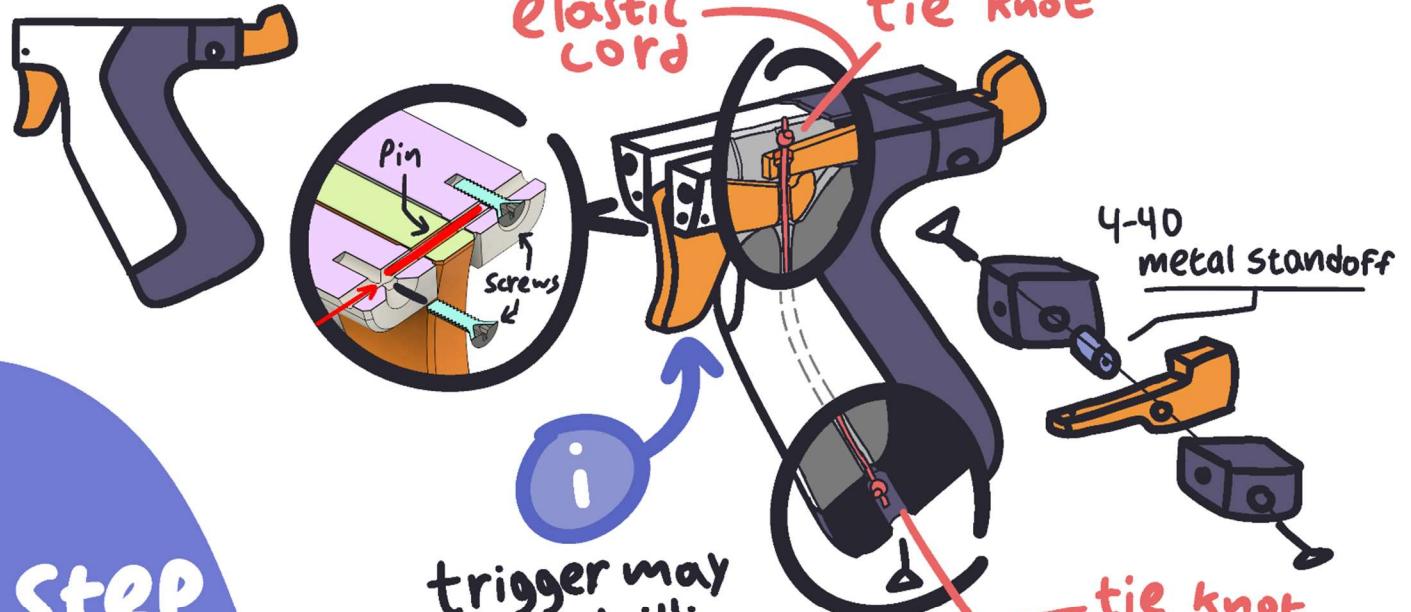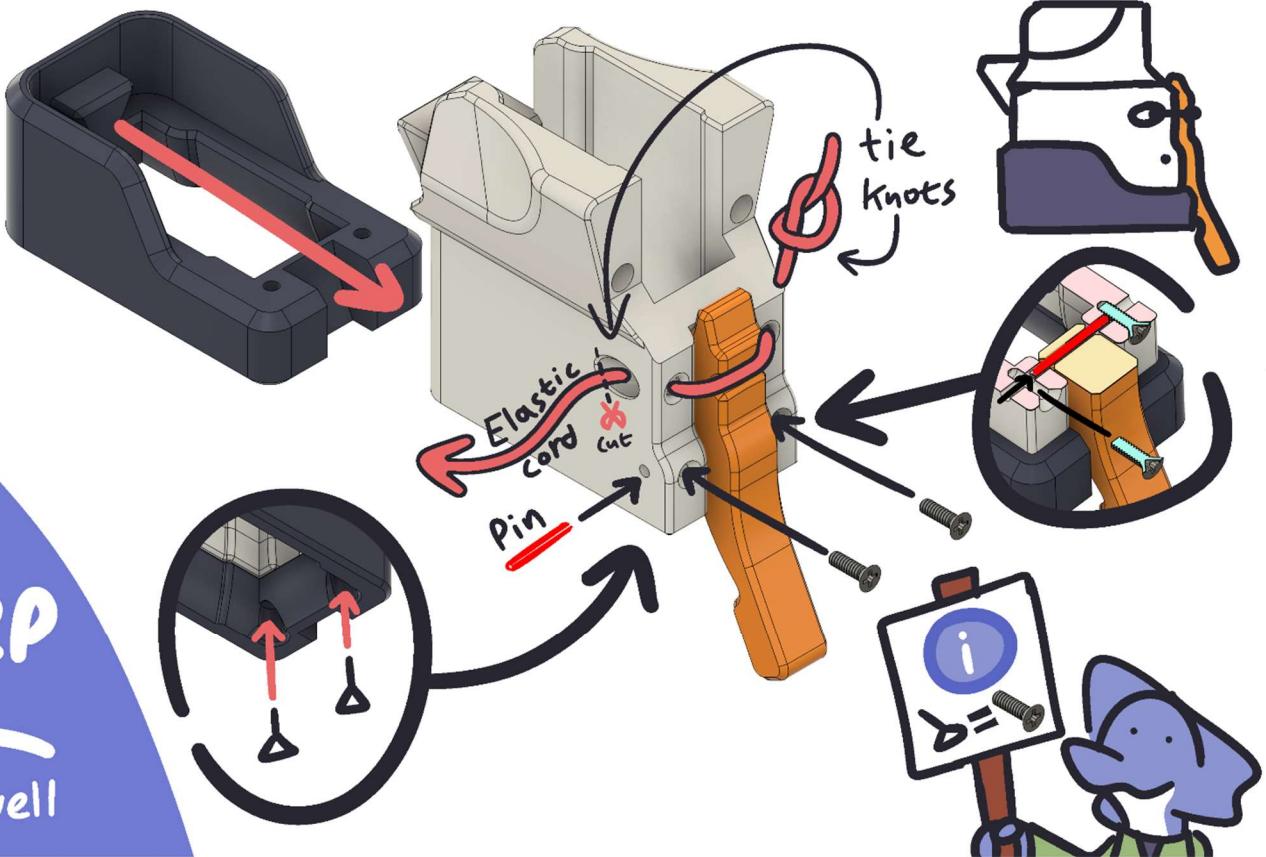


Step 3 The Grip



tie knot
OR
Add screw

Step 4


Main Body

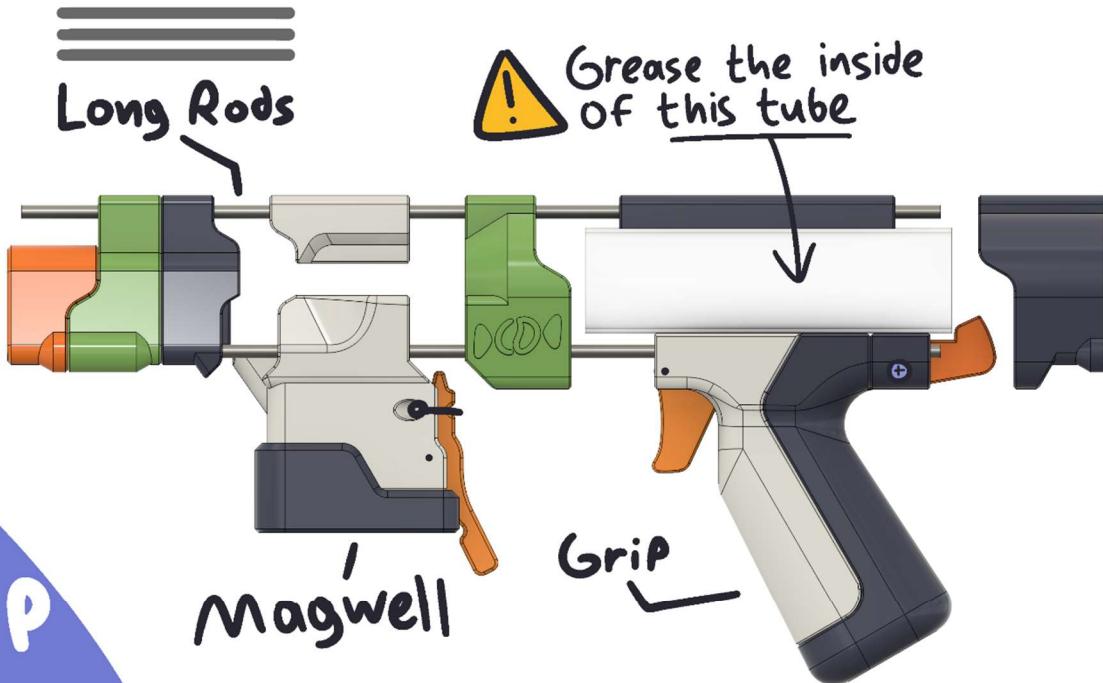


Step 5

Dry Fit


Dry fit the rear endcap and adjust the rods by hand-twisting them until they protrude as much as possible while still letting the **funny shape** sit flush with the endcap.

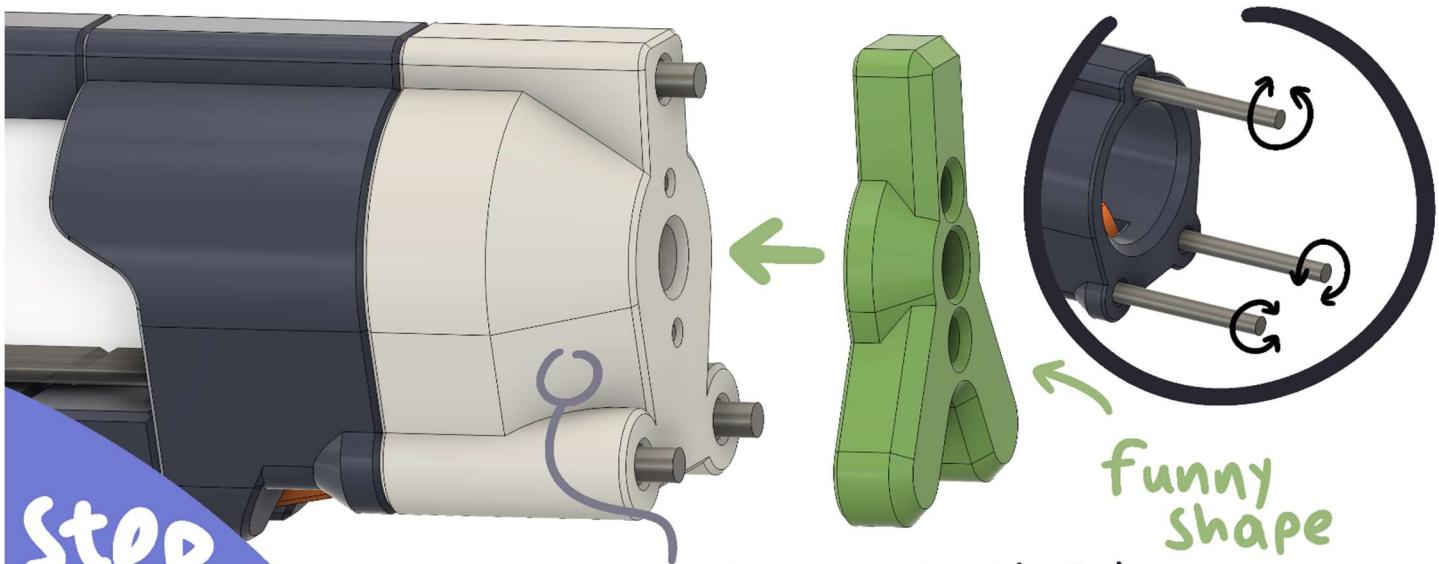

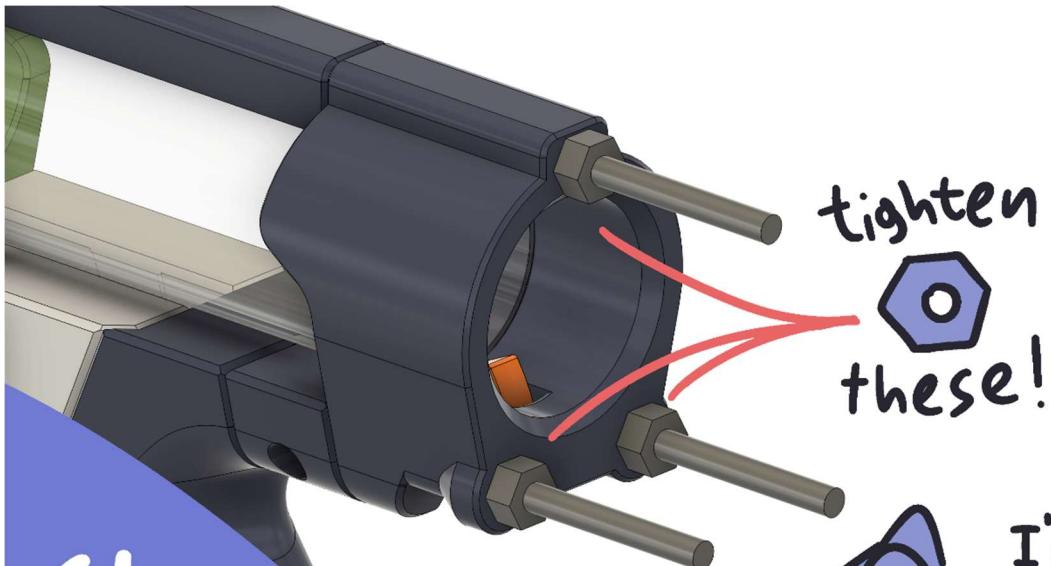



Step 6

Body hex nuts

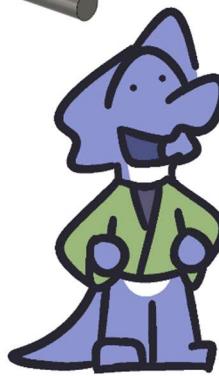


I'm standing
here to fill the
empty space.

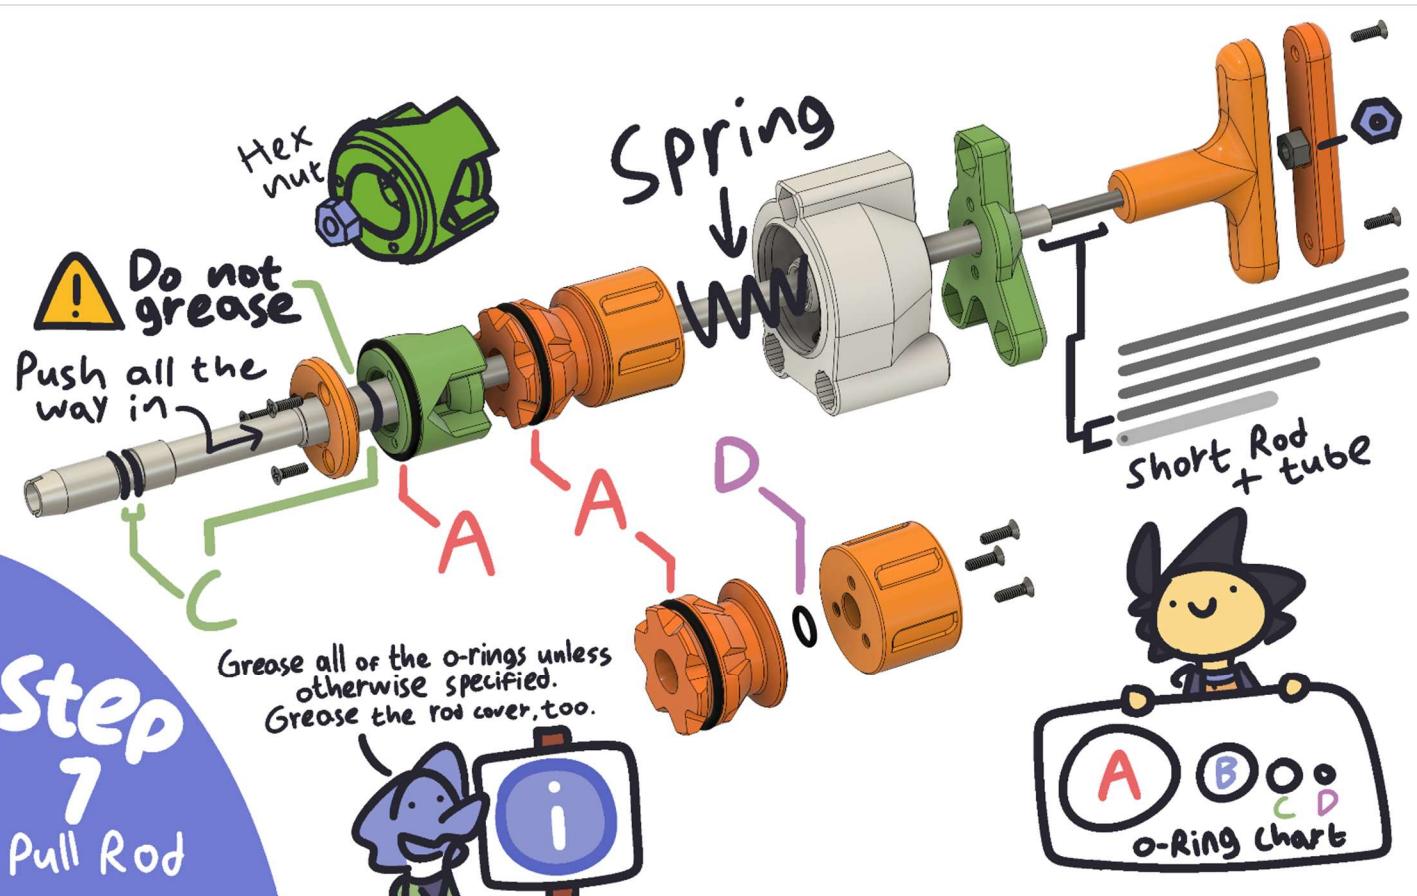

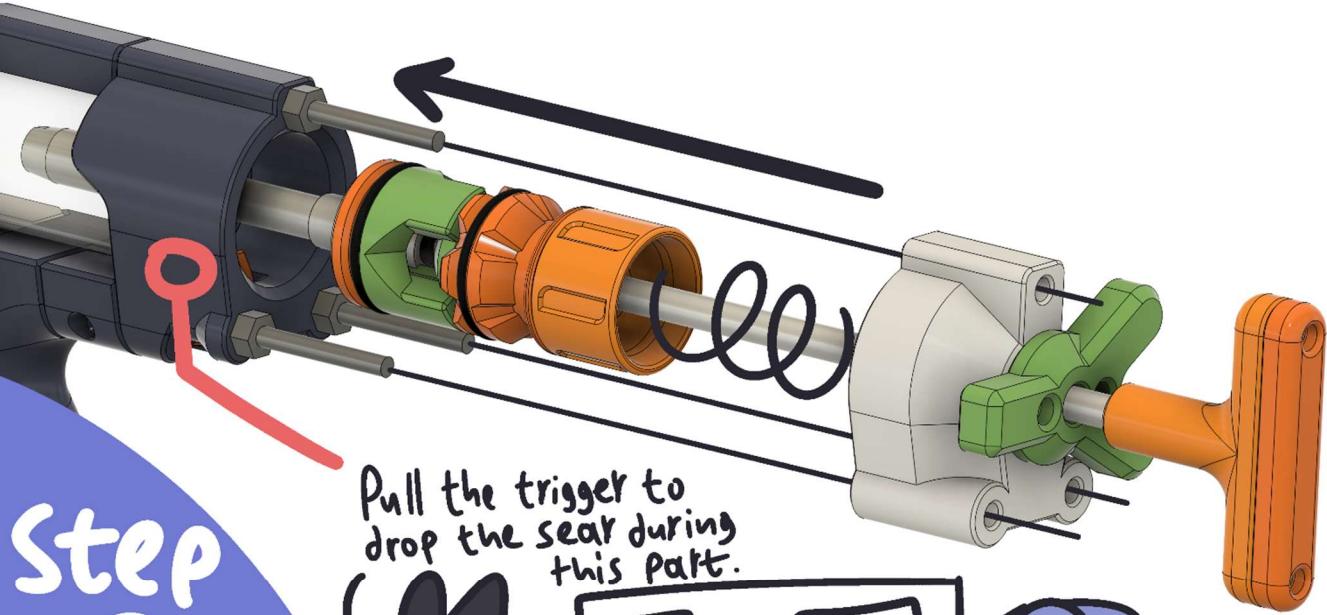


Step 8

Pull Rod Installation

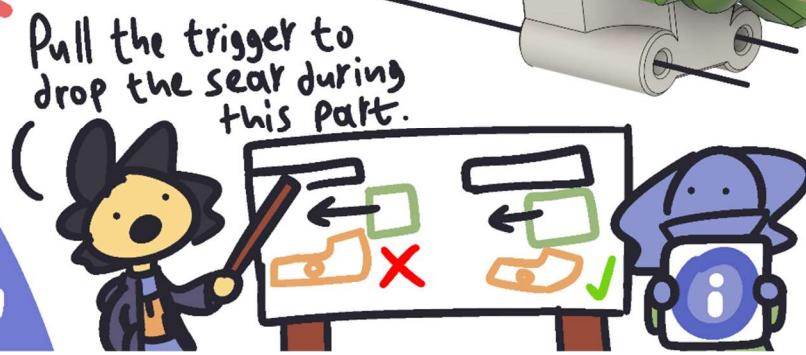


these ones don't
need to be super tight.

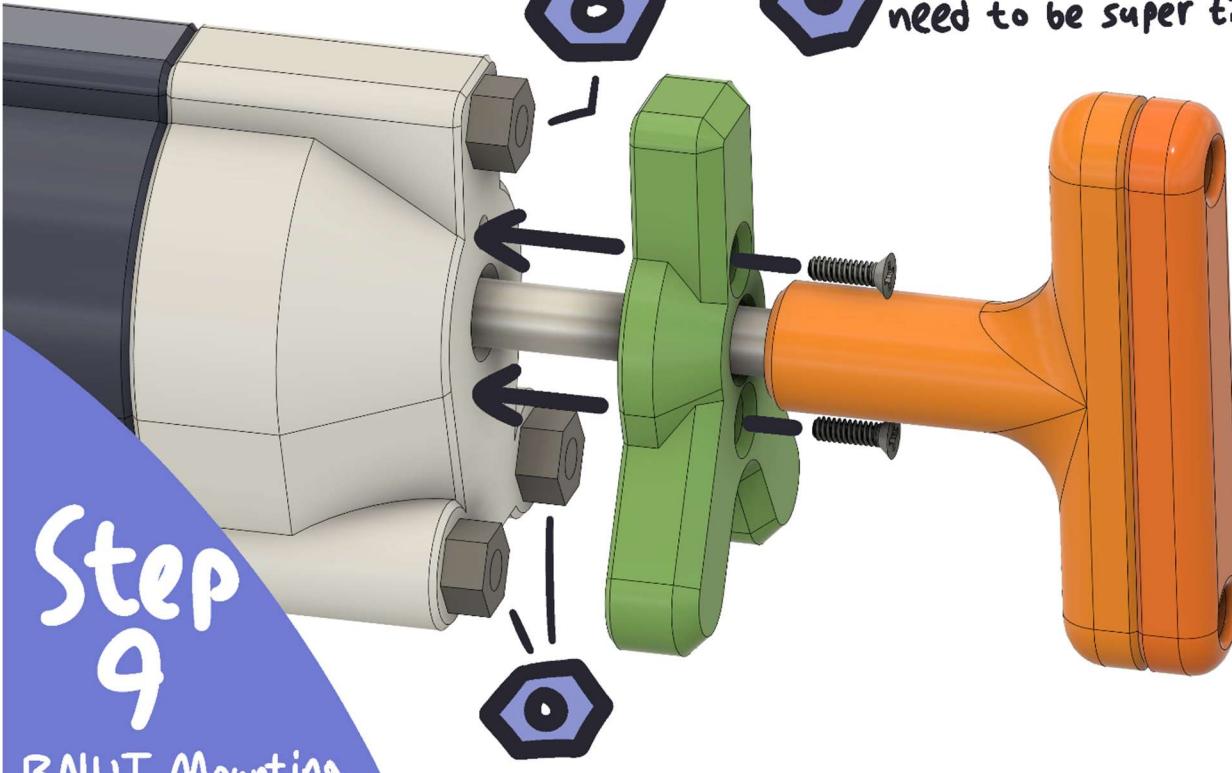

Step 9

BNUT Mounting

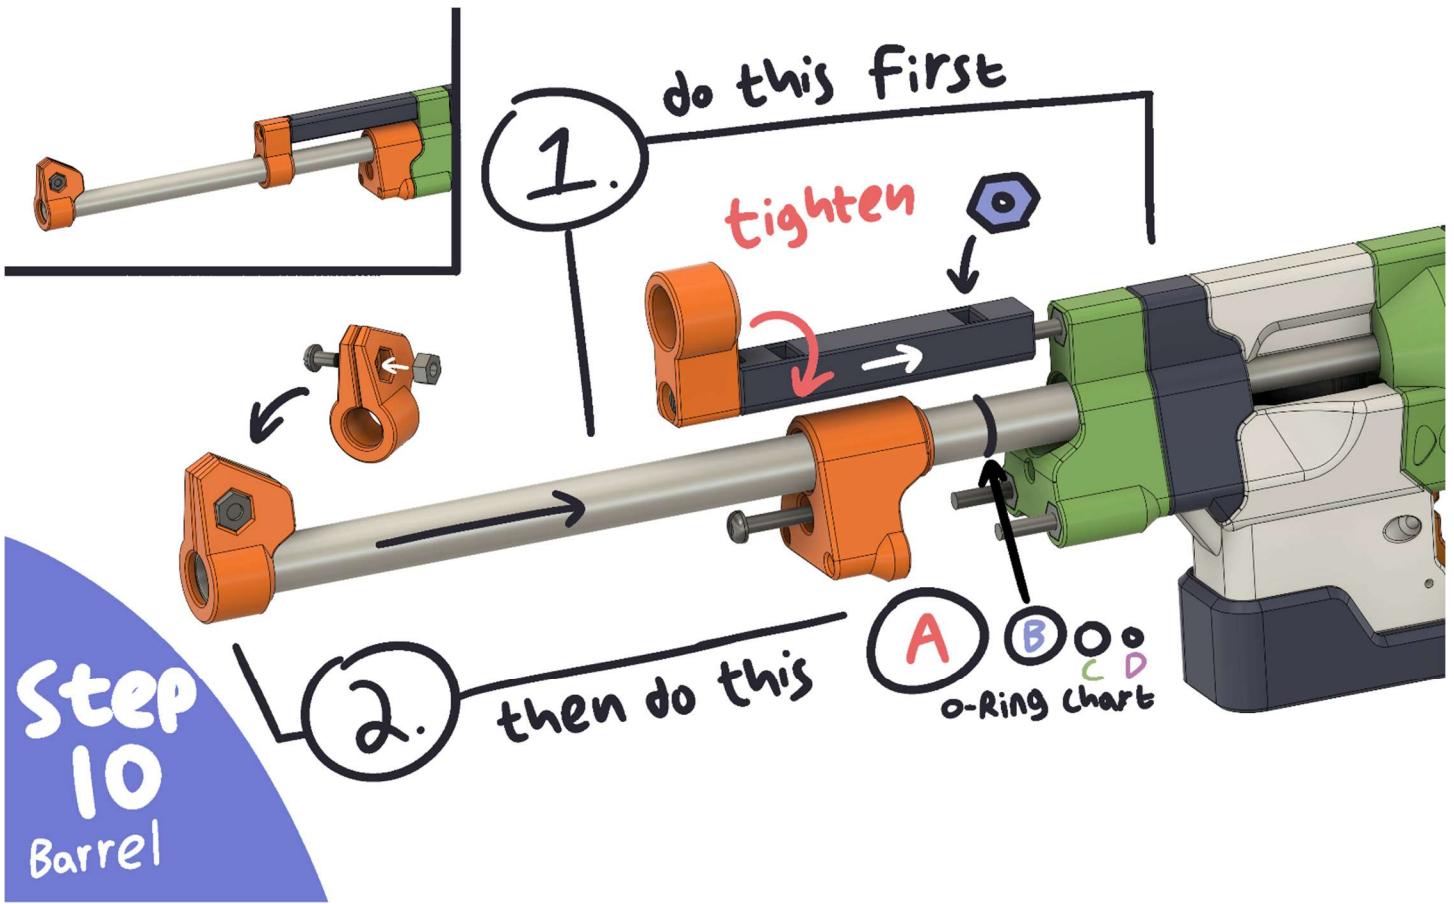

- 1) insert a Talon mag here
- 2) Yank this thing back, THEN PUSH IT BACK IN
- 3) Pull trigger